





PANDUIT VERISAFE 2.0
Absence of Voltage Tester
CAT III (1000V), CAT IV (600V)


Tester location: Line Load Other _____

 Push Button to Begin Test

 Flashing - Test in Progress
Solid - Voltage may be Present
See Diagnostic Code for Status:

# Flashes	Description
1	Check Battery
2	Voltage above Threshold
3	Temperature Out of Range
4	Installation Not Verified
5, 6, 7 or 8	See User Manual

Equipment De-Energized, < 3V
 Hazardous Voltage Present







Follow safety procedures & use required PPE

**Simplify absence
of voltage testing**

The Safe Way to Protect Employees and Equipment

The VeriSafe 2.0 Absence of Voltage Tester simplifies the voltage testing process. With the push of a button, workers can quickly determine voltage status and see an active indication when the absence of voltage is confirmed. This provides a new and innovative way to safely, reliably, and efficiently test for the absence of voltage without exposure to electrical hazards.

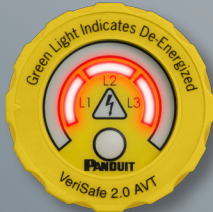

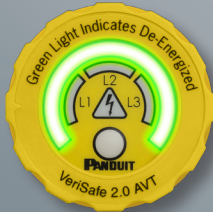Voltage PRESENCE Indication		ABSENCE of Voltage Testing	
Red LEDs indicate hazardous voltage present	Lack of red LEDs does not guarantee voltage absence	Push to initiate test and see progress	Green indicates absence of voltage is confirmed
			

What's Included

- 1** Indicator Module
3.6V Battery powered option shown
Battery free option available
- 2** System Cable
- 3** Isolation Module
- 4** Instruction Label



Features and Benefits



Improved Safety and Risk Reduction

- No exposure to electrical hazards while testing
- Reduces human factors



Simplified Process for Easier Compliance

- Satisfies criteria in NFPA 70E 120.5(7) Exception 1 & CSA Z462 4.2.5 (g) Exception 2
- UL 1436 listing pending



Reliable Results

- Fail-safe design with active indications
- Safety functions pending SIL 3 (IEC 61508-1)
- Redundant channels



Increased Productivity



- Results within 10 seconds of button push
- Troubleshoot abnormal power conditions
- Utilize network module for remote monitoring



Flexible Applications


- 2.0 AVT technology is designed for even more applications
- Suitable for indoor, outdoor use

Comparison of Test Methods

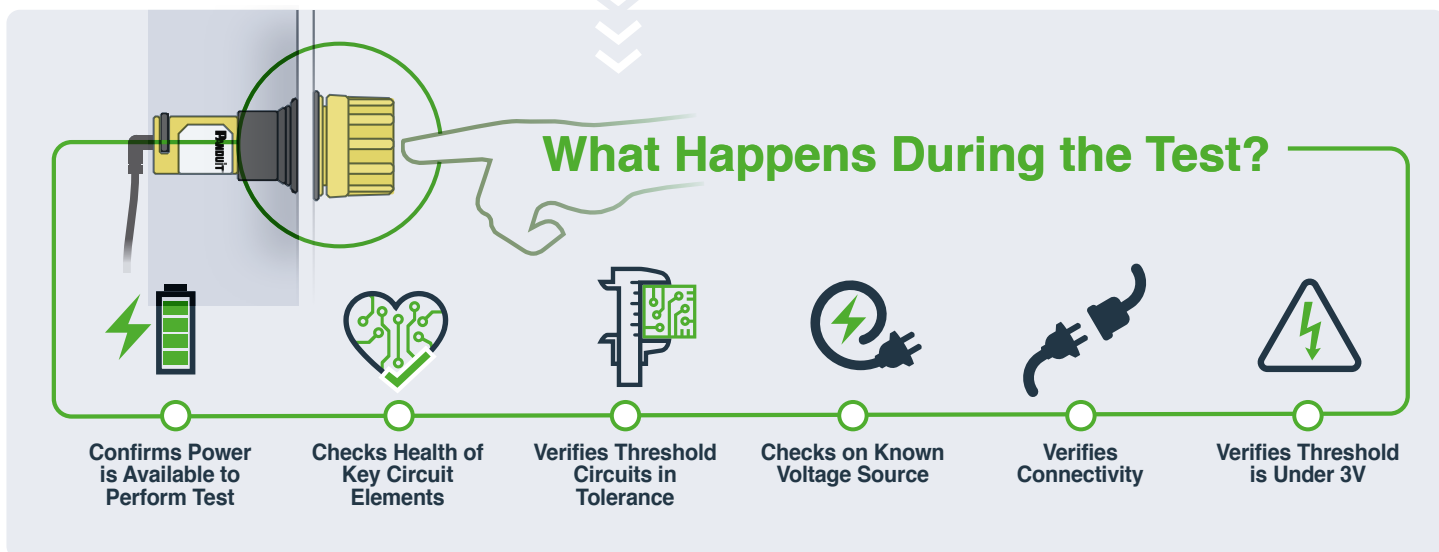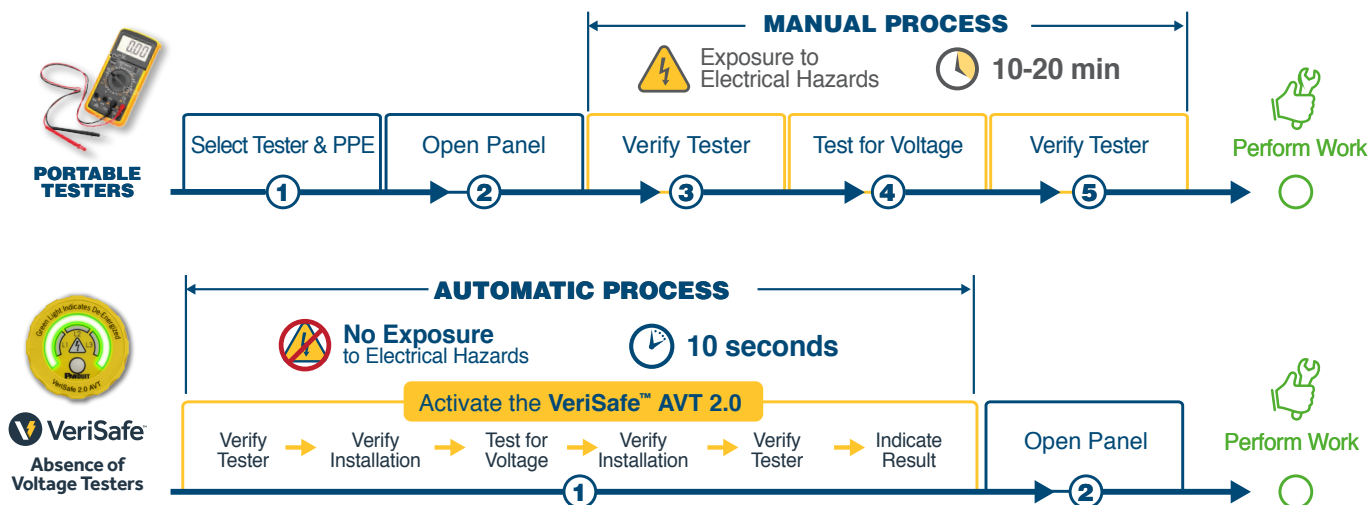

More than an Absence of Voltage Tester


2.0 Isolation Module

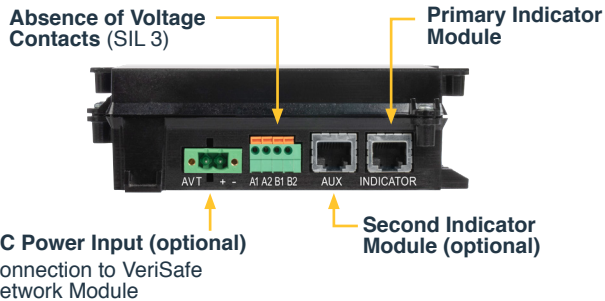

Absence of Voltage Contacts




Redundant solidstate signal outputs (SIL 3) for optional integration with control systems. The contacts are normally open and close only when the green Absence of Voltage Indicator is illuminated.

Network Module

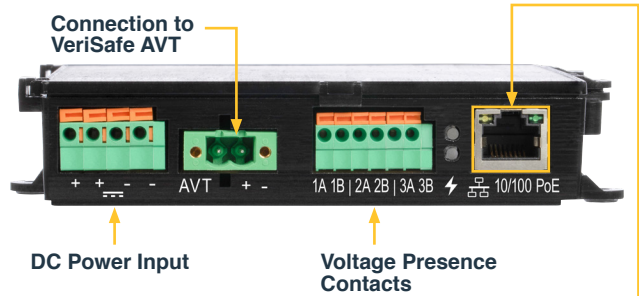


Voltage Presence Contacts

Solidstate signal outputs that are normally open and close when a red voltage presence indicator is not illuminated.

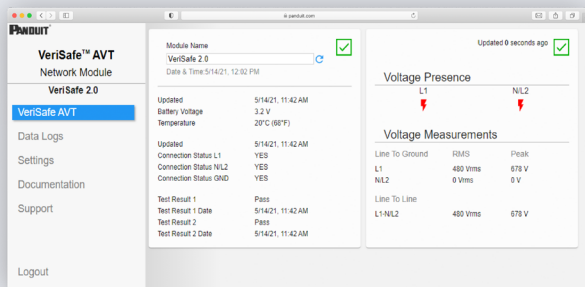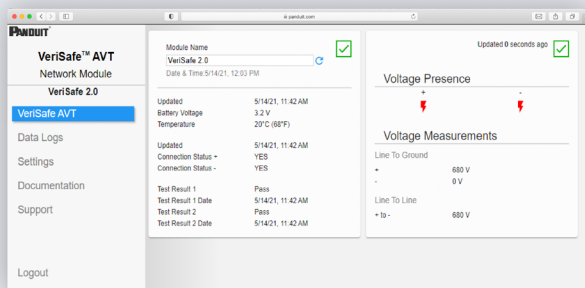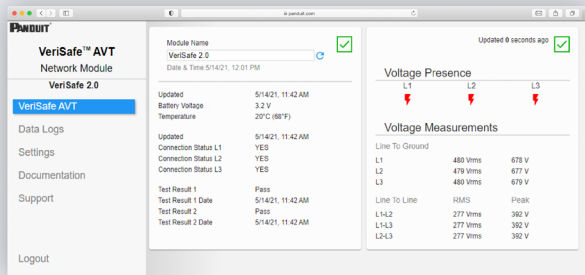

Network Connection

Real-Time Diagnostics and Performance Reporting

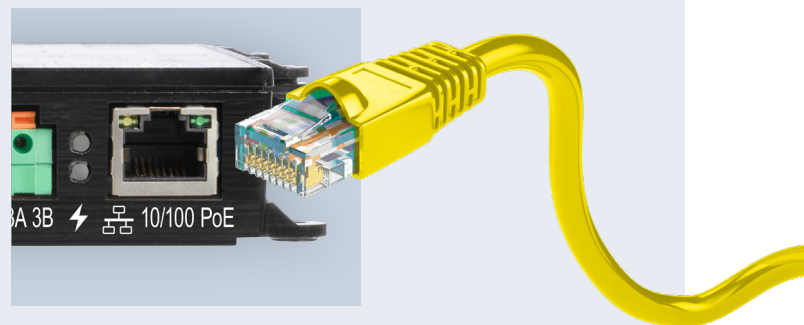

- **Record Test Results**
Time stamp, result, diagnostic codes, data logs
- **Troubleshoot Remotely**
See voltage values in real time
Set alerts for voltage drops and outages
- **View sensor lead status**
- **Monitor battery life status**
- **Analyze temperature trends**
- **Power the AVT**
- **EtherNet/IP and Modbus TCP Connection**
Easy integration or utilize onboard web server

Refer to VS2-NET specification sheet for more technical information.

Ordering Information

Step 1 Select Configuration

VS2-AVT - XY - Z - ##

Choose your system

XY



3P 3-Phase 2.0 System
10' (3.0 m) Black Sensor Leads



1P DC/Single-Phase 2.0 System
10' (3.0 m) Black Sensor Leads

Choose your indicator

Z



F Battery Free Indicator



B Battery Powered Indicator
(battery included)

Choose your cable

##



02 2' (0.6m) System Cable

08 8' (2.4m) System Cable

16 16' (4.8m) System Cable

Step 2 Select Upgrades (optional)

Additional Indicator Options



VS2-NET

Network Module
for use with
VS2-AVT models.



VS2-AVT-11F

Battery Free Single-
Phase Indicator



VS2-AVT-31F

Battery Free 3-Phase
Indicator



VS2-AVT-11B

Battery Powered
Single-Phase Indicator
No Battery Included



VS2-AVT-31B

Battery Powered
3-Phase Indicator
No Battery Included

Replacement System Cable: For use with VeriSafe 2.0 Base and Base Plus Modules only



VS2-CABLE-02

2' Cable Length
.6 m

VS2-CABLE-04

4' Cable Length
1.2 m

VS2-CABLE-08

8' Cable Length
2.4 m

VS2-CABLE-16

16' Cable Length
4.8m

VS2-CABLE-20

20' Cable Length
6.1 m

Step 3 Select Connectors (optional)

VeriSafe Insulation Piercing Connection Kit
Kits includes 3 connectors and ferrules for installation of 1 AVT.



VS-CKP-14-6

Connection Kit
For Tapping 14 to 6 AWG
conductors. Rated up to 600V



VS-CKP-4-000

Connection Kit
For Tapping 4 to 3/0 AWG
conductors. Rated up to 600V.





VS-CKP-1K4/0-500


Connection Kit
For Tapping AWG 4/0 to 500 MCM
conductors. Rated up to 1000V.

Dimensions



Battery Free Indicator Module

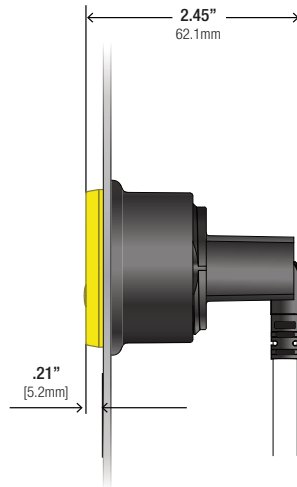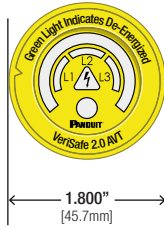

Panel Knockout


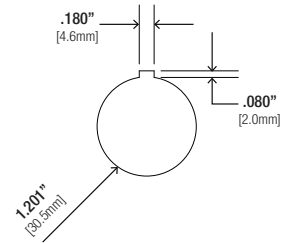


Battery Powered Indicator Module

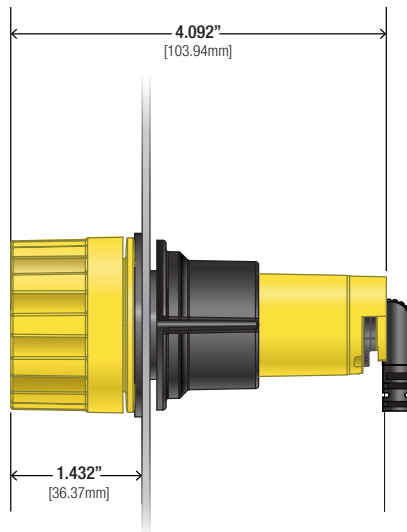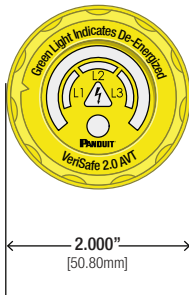

Isolation Module

Install on DIN rail or with optional mounting tabs

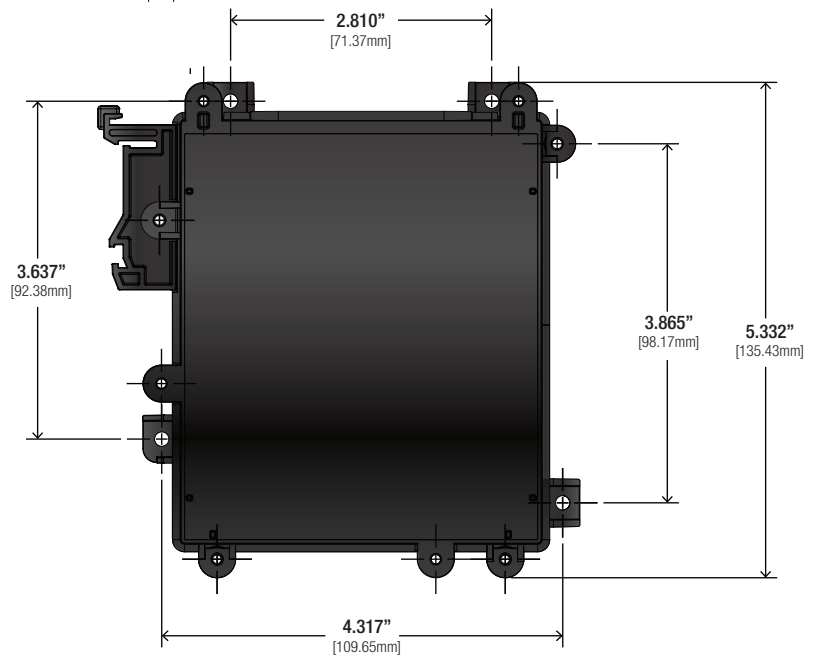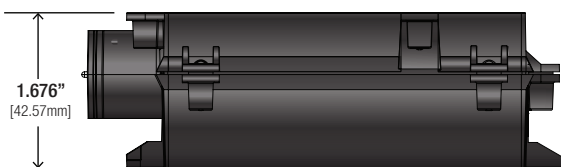

Dimensions in inches [millimeters]

Technical Specifications

Applications

Electrical System	For use in 1 and 3-phase AC systems, DC systems
Voltage Detection Range	Up to 1000V AC (50/60Hz), 1000V DC; Rated tolerance +10%
Absence of Voltage Threshold	3 V
Overvoltage Category	III (1000 V), IV (600 V)
Degree of Protection	Battery Indicator Module: For Flat Surface Mounting in a TYPE (UL, NEMA and CSA) 1, 12, 13, 4, 4X, IP66 or IP67 Enclosure Battery Free Indicator Module: For Flat Surface Mounting in a TYPE (UL, NEMA and CSA) 1, 12, 13, 4, 4X, IP66, IP67 or IP69K Enclosure Isolation Module: Open Type, IP20
Hazardous Locations	cULus: Class I, Division 2, Groups A, B, C, D T3 Class II, Division 2, Groups F and G T3 Class I Zone 2 AEx ic ec T3 Gc; Ex ic ec T3 Gc Zone 22 AEx tc IIIC T200°C Dc; Ex tc IIIC T200°C Dc ATEX: Ex II 3G Ex ic ec T3 Gc Ex II 3D Ex tc IIIC T200°C Dc IECEX: Ex ic ec T3 Gc Ex tc IIIC T200°C Dc

Environment

Operating Temperature	-25°C to 60°C (-13°F to +140°F)
Storage Temperature	-45°C to 85°C (-49°F to +185°F)
Humidity	5 to 90% non-condensing; Rated 80% at 40°C, decreasing linearly to 50% at 60°C
Pollution Degree	3
Altitude	Up to 5,000 meters (3.1 miles)

Power Requirements

Battery	3.6V Lithium Battery, 4-6 year life expectancy
DC Power	35mA max @ 12 VDC; 17mA max @ 24 VDC
PoE*	PoE (10/100), 15mA, IEEE 802.at (-af) Type 1 Class III PoE topology

*VS2-NET is required to use PoE.

Standards and Certifications

NOTE: All standards and certifications listed in this document are planned or pending final approval by appropriate listing agencies.

UL 1436	Standard for outlet circuit testers and similar indicating devices
UL 508 & CSA-C22.2 No. 14	Industrial control equipment
CAN/CSA-C22.2 No. 160	Voltage and Polarity Testers
CAN/CSA-C22.2 No. 107.1	Power Conversion Equipment
IEC / UL / CSA C22.2 NO. 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 1: General Requirements
IEC / UL / CSA C22.2 NO. 61010-2-030	Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 2-030: Particular requirements for testing and measuring circuits
IEC 61508-1, -2, and -3 {SIL 3 Rating}	Safety of Electrical/Electronic/programmable Electronic safety-related security systems – Part 1 General Requirements Part 2 Requirements for Electrical / Electronic / Programmable safety related systems Part 3 Software Requirements

Ordering Information

Part Number	Part Description
-------------	------------------

VeriSafe 2.0 AVT Absence of Voltage Tester

VS2-AVT-3PB-02	Includes three-phase battery powered indicator module, 2ft (0.6m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-3PB-08	Includes three-phase battery powered indicator module, 8ft (2.4m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-3PB-16	Includes three-phase battery powered indicator module, 16ft (4.8m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-3PF-02	Includes three-phase battery free indicator module, 2ft (0.6m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-3PF-08	Includes three-phase battery free indicator module, 8ft (2.4m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-3PF-16	Includes three-phase battery free indicator module, 16ft (4.8m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PB-02	Includes single-phase/DC battery powered indicator module, 2ft (0.6m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PB-08	Includes single-phase/DC battery powered indicator module, 8ft (2.4m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PB-16	Includes single-phase/DC battery powered indicator module, 16ft (4.8m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PF-02	Includes single-phase/DC battery free indicator module, 2ft (0.6m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PF-08	Includes single-phase/DC battery free indicator module, 8ft (2.4m) system cable, and 10ft (3.0m) sensor leads
VS2-AVT-1PF-16	Includes single-phase/DC battery free indicator module, 16ft (4.8m) system cable, and 10ft (3.0m) sensor leads

Accessories

VS2-NET	Network Module accessory, for use with VS2-AVT models.
VS2-AVT-3IF	Battery Free Indicator Module, three-phase faceplate, indicator module only (system cable sold separately)
VS2-AVT-11F	Battery Free Indicator Module, single-phase/DC faceplate, indicator module only (system cable sold separately)
VS2-AVT-3IB	Battery Powered Indicator Module, three-phase faceplate, indicator module only (battery and system cable sold separately)
VS2-AVT-11B	Battery Powered Indicator Module, single-phase/DC faceplate, indicator module only (battery and system cable sold separately)
VS2-AVT-3P-ISO	Three-Phase Isolation Module replacement
VS2-AVT-1P-ISO	Single-Phase/DC Isolation Module replacement
VS2-CABLE-02	Replacement Cable, 2ft (0.6m), for use with VeriSafe 2.0 AVTs only.
VS2-CABLE-04	Replacement Cable, 4ft (1.2m), for use with VeriSafe 2.0 AVTs only.
VS2-CABLE-08	Replacement Cable, 8ft (2.4m), for use with VeriSafe 2.0 AVTs only.
VS2-CABLE-16	Replacement Cable, 16ft (4.8m), for use with VeriSafe 2.0 AVTs only.
VS2-CABLE-20	Replacement Cable, 20ft (6.0m), for use with VeriSafe 2.0 AVTs only.
VS2-CABLE-30	Replacement Cable, 30ft (9.1m), for use with VeriSafe 2.0 AVTs only.
VS-AVT-BATTERY	Replacement Battery, VeriSafe AVT, 3.6V
VS2-AVT-RL	Replacement Labels. Includes one faceplate and instruction label replacement for each offered language.

Insulation Piercing Connector Kits

VS-CKP14-6	Insulation Piercing Connection Kit for Tapping 14 to 6 AWG conductors. Rated for 600V installations. Kit includes 3 connectors for installation of 1 AVT
VS-CKP4-000	Insulation Piercing Connection Kit for Tapping 4 to 3/0 AWG conductors. Rated for 600V installations. Kit includes 3 connectors for installation of 1 AVT.
VS-CKP1K4/0-500	Insulation Piercing Connection Kit for Tapping AWG 4/0 to 500MCM copper conductors. Rated for 1KV installations. Kit includes 3 connectors for installation of 1 AVT.

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT CANADA
Markham, Ontario
cs-cdn@panduit.com
Phone: 800.777.3300

PANDUIT EUROPE LTD.
London, UK
cs-emea@panduit.com
Phone: 44.20.8601.7200

PANDUIT SINGAPORE PTE. LTD.
Republic of Singapore
cs-ap@panduit.com
Phone: 65.6305.7575

PANDUIT JAPAN
Tokyo, Japan
cs-japan@panduit.com
Phone: 81.3.6863.6000

PANDUIT LATIN AMERICA
Guadalajara, Mexico
cs-la@panduit.com
Phone: 52.33.3777.6000

PANDUIT AUSTRALIA PTY. LTD.
Victoria, Australia
cs-aus@panduit.com
Phone: 61.3.9794.9020

For a copy of Panduit product warranties, log on to www.panduit.com/warranty



For more information
Visit us at www.panduit.com/verisafe
Contact Customer Service by email: cs@panduit.com
or by phone: 800.777.3300

©2021 Panduit Corp.
ALL RIGHTS RESERVED.
Printed in the U.S.A.
SFCB24--SA-ENG
6/2021